

How to Replace Your Vacuum's Standard Headlight Bulb

BISSELL Part # 203-1297

1. Unplug the vacuum from electrical outlet.
2. Using a flat bladed screwdriver, pry the tab on the left and right side out and pull out to remove the lens.
3. Remove the bulb from the socket by grasping the bulb and pulling gently. Install the new bulb by pushing it gently into the socket until the bulb snaps into place.
4. Reposition the lens and snap it back into place.

Need help?

Call:

1-800-237-7691

Mon-Fri: 8am to 10pm ET

Sat: 9am to 8pm ET

Visit:

www.bissell.com/contact-us