








## How to Replace Your Vacuum's Rotating Floor Brush

BISSELL Part # 203-7029



1. Turn off vacuum and unplug from electrical outlet.
2. Place vacuum upside down with brush roll facing upwards.
3. Remove five screws as shown with a small Phillips screwdriver.
4. Lift off brush cover.
5. Grasp floor brush at both ends and lift out.
6. Clean strings, hair and other debris from floor brush, motor shaft, and drive belt.
7. Check floor brush for worn areas and replace if needed.
8. Check air passageway for obstructions. Remove debris from this area.
9. When finished cleaning, reposition floor brush and drive belt. Then replace the brush cover and five screws.

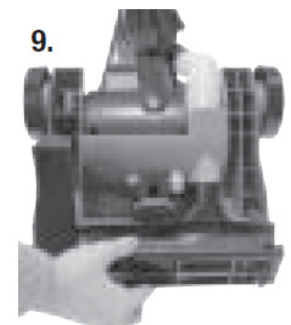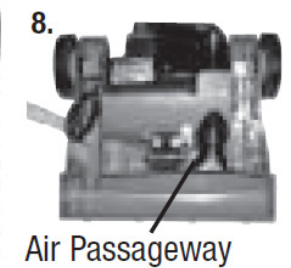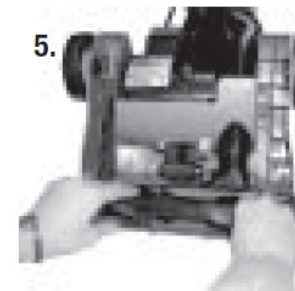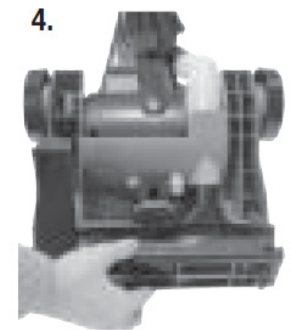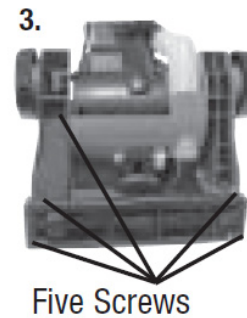

### Need help?

#### Call:

1-800-237-7691

Mon-Fri: 8am to 10pm ET

Sat: 9am to 8pm ET

#### Visit:

[www.bissell.com/contact-us](http://www.bissell.com/contact-us)

To help keep your product running its best, purchase genuine parts and accessories directly from BISSELL.  
[www.bissell.com](http://www.bissell.com)