



# **BOLT**<sup>TM</sup>

2-IN-1 CORDLESS VACUUM (1313 & 1315 SERIES)

## **QUICK START GUIDE**



### **Charging Unit**

**1313:** Plug cord directly into the back of the unit.

**1315:** Insert charging adapter plug into the bottom of the charging base and place unit onto charging base.

The power LED lights will light up when charging. Charge the unit completely for 8 hours before first use.



### **2-Way Folding Handle**

To release 2-Way Folding Handle, pull trigger located on the back of the handle to bend handle forward for cleaning under furniture or to bend handle backward for storage.



### **Removing Hand Vacuum**

To remove the hand vacuum, grasp hand vacuum handle and pull directly out of the unit.



### **Removing Filter from Filter Cup**

To remove the filter from the filter cup, grasp filter tabs, turn counterclockwise and lift up. Tap firmly against the inside of a waste container, removing any visible dirt.



### **Emptying Dirt Tank**

With hand vacuum removed from the unit, push the release button on top of the hand vacuum to release dirt tank. Grasp filter tabs and pull up to remove filter cup and empty the dirt into the trash can.



**Please refer to the User Guide for more complete product information.**