



# PET HAIR ERASER<sup>®</sup> LIFT-OFF<sup>®</sup>

QUICK START GUIDE



## DISCOVER MORE GO TO [BISSELL.COM/SUPPORT](https://www.bissell.com/support)

Join us online for a complete guide to your new purchase, including troubleshooting, product registration, parts and more.

Go to [BISSELL.com/support](https://www.bissell.com/support) and search 2087.



# IMPORTANT SAFETY INSTRUCTIONS

## READ ALL INSTRUCTIONS BEFORE USING YOUR UPRIGHT VACUUM.

Always connect to a polarized outlet (one slot is wider than the other). Unplug from outlet when not in use and before conducting maintenance. When using an electrical appliance, basic precautions should be observed, including the following:

## WARNING

### TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

- » This appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the plug in any way.
- » Do not plug in your vacuum until you are familiar with all instructions and operating procedures.
- » Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- » To reduce the risk of electrical shock, turn power switch OFF and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.
- » Do not operate vacuum with damp or wet filters. Allow components to dry before reassembling the dirt container.
- » Before using your vacuum, make sure that the dirt container is in locked position and that all filters, both pre and post-filters are in place. DO NOT operate your vacuum without these filters.
- » Do not leave vacuum cleaner when it is plugged in. Unplug from outlet when not in use and before servicing.
- » Do not use outdoors or on wet surfaces.
- » Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- » Do not use for any purpose other than described in this User's Guide. Use only manufacturer's recommended attachments.
- » Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- » Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- » Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- » Do not handle plug or vacuum cleaner with wet hands.
- » Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- » Turn off all controls before plugging or unplugging vacuum cleaner.
- » Use extra care when cleaning on stairs.
- » Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- » Do not use vacuum cleaner in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- » Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- » Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- » Do not use without filters in place.
- » Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- » Use only on dry, indoor surfaces.
- » Keep appliance on a level surface.
- » Do not carry the vacuum cleaner while it is running.
- » Unplug before connecting or disconnecting the TurboBrush® Tool.

## LED LIGHTED CREVICE TOOL WARNING

- » Caution: Risk of fire and burns. Do not recharge, disassemble, heat above 60°C (140°F) or incinerate. Keep batteries out of reach of children and in original package until ready to use. Dispose of used batteries promptly.
- » Never put batteries in mouth. If swallowed, contact your physician or local poison control.
- » Replace Battery With CR1632 Only. **USE OF ANOTHER BATTERY MAY PRESENT A RISK OF FIRE OR EXPLOSION.** CR1632 cells may be purchased anywhere batteries are sold.

## IMPORTANT

- » The brush roll will automatically shut off when vacuum is locked in upright position, recline to reactivate.
- » In the unlikely event that hair wrapped around your brush roll, run vacuum back and forth on clean carpet several times to help release any wrapped hair.
- » Turn off the brush roll when vacuuming hard or delicate surfaces that may be caught by the rotating brush. This could include hard wood, tiled floors, small area rugs or frieze carpets that have long delicate fibers or threads.
- » If an object becomes lodged in foot and brush shuts off, turn vacuum off and unplug from electrical outlet. Remove obstruction and brush will automatically reset when vacuum is plugged and turned back on.
- » Replace this filter every 3 to 6 months. Visit [www.bissell.com](http://www.bissell.com) for Style 2087 filter replacements.
- » The thermal protector controls the main vacuum motor only, not the brush motor. If the thermal protector activates, the brush will continue to operate normally; however, there will be no suction.
- » When the small tab on the connection point of Crevice tool comes into contact with the handle, wand, or hose; that triggers the LED light to come on.
- » Pet TurboEraser® Tool does not store on unit.



©2017 BISSELL Homecare, Inc. Grand Rapids, Michigan  
All rights reserved. Printed in China  
Part Number 161-4189 12/17  
Visit our website at: [www.BISSELL.com](http://www.BISSELL.com)  
Febreze and related trademarks are owned by the Procter & Gamble Company, Cincinnati, Ohio and used under license by BISSELL Homecare, Inc.

**3-Year limited warranty, may vary by state. Visit [www.bissell.com/support](http://www.bissell.com/support) or call 800-237-7691 for complete warranty information.**


## SAVE THESE INSTRUCTIONS FOR FUTURE USE

This model is for household use only.

# Quick Start Guide


## Assembly

**1**

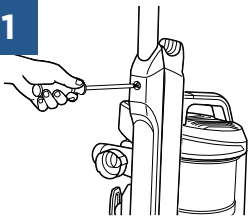


Slide handle into vacuum base and use the screw taped to the handle to attach.

**2**

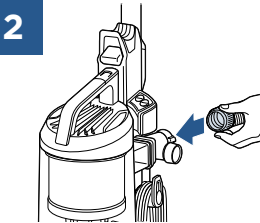

Line tabs on hose cuff to notches on vacuum. Twist clockwise to lock in place.


**3**

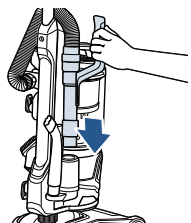

Push handle end into base of vacuum on opposite side.


## Optional Febreze® Filter

**1**

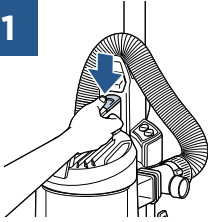


Remove Dirt Container by pressing the Tank Release Button.

**2**

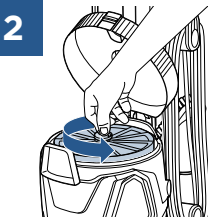

Lift post-motor filter cover and twist the tab counter-clockwise to unlock.


**3**

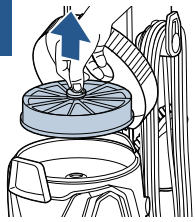

Remove the post-motor filter and replace with the Febreze® filter.


## Use

**1**

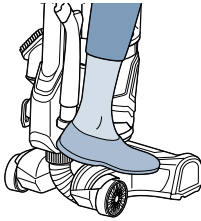


Step gently on base and pull back on handle to recline.

**2**

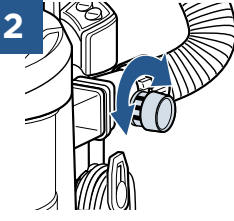

Adjust the Floor Type Setting LEFT for high pile carpet or RIGHT for bare floor.


**3**

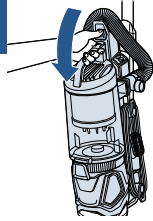

Push the Lift-Off® button to remove pod and clean stairs and furniture.


## Maintenance

**1**

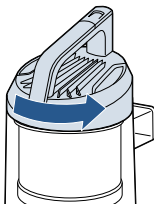


Twist tank cover to the unlock position, then pull up on the handle.

**2**

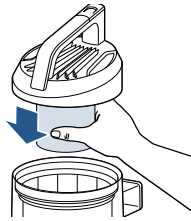


Pull down on the pre-motor filter to remove it from the tank cover.

**3**

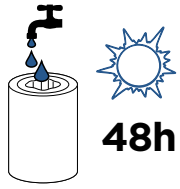

All three pieces of the filter are washable. Dry separately and completely before returning them to the vacuum.

# Product View

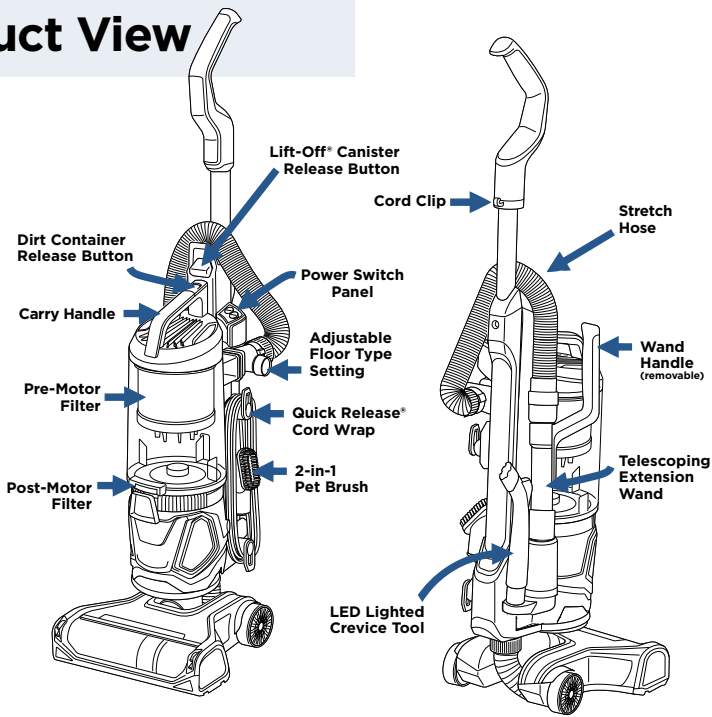

## WARNING

To reduce the risk of electric shock, turn power switch off and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.

Problem	Possible causes	Remedies
<b>Brush roll doesn't rotate</b>	Brush roll switch is turned off.	Make sure Brush roll switch is on.
	Vacuum is locked in upright position.	Recline vacuum and switch on the Brush roll.
	Vacuumping on Premium Soft Carpet.	Turn the Floor Type Setting towards high carpet.
	Brush roll has lodged debris or other entanglements, keeping the brush from rotating.	Unplug, check for debris, and remove the debris.
<b>Vacuum won't pick up dirt</b>	Lift-Off® Pod is not securely seated.	Remove Lift-Off® pod and replace, making sure that it "clicks" into place.
	There is a clog in the vacuum.	Check inside of hose for clogs by disconnecting from vacuum. Check for debris that may be restricting the brush roll rotation.
	Dirt Container is not seated correctly.	Press the Tank Release to release the Dirt Container and reseal properly.
<b>Vacuum is hard to push or pull</b>	Vacuum is in the wrong Floor Type Setting.	Turn the knob towards the high carpet setting.

**Go online to [BISSELL.com/support](https://www.bissell.com/support)**

Going online is **quick, easy** and offers you **benefits** over the lifetime of your product.