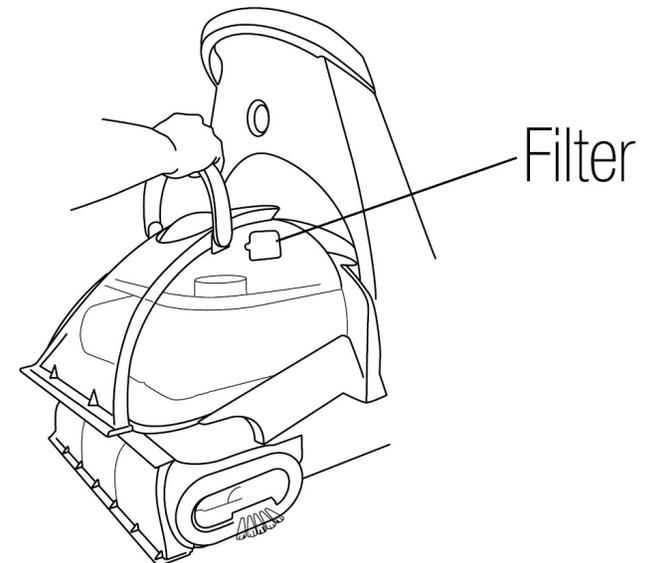# How to Remove and Clean Your Deep Cleaner's Tank

BISSELL Part # 203-6611

1. Turn power and heater switches OFF (O). Unplug the machine and wrap the power cord.

2. After emptying the 2-in-1 water tank, rinse it out at a faucet with running hot tap water, taking care to clean underneath the heavy duty bladder, and all around it.

3. The top half of the tank can be rinsed clean through the nozzle area. Also, pop out the red filter underneath the top half of the tank and rinse that out. Replace before putting the top and bottom halves of the tank together.

4. Before you place the cleaned 2-in-1 water tank back onto the machine, simply unscrew the floor nozzle using a Phillips head screwdriver. This can be rinsed out at the faucet. Then replace back onto the machine by starting from the bottom of the nozzle and hooking the tabs into the holes on the bottom sides of the machine. Secure into place with the screw.

5. The inside of the end caps by the brush rolls can be wiped out with a clean paper towel, or, if a more thorough cleaning is desired, the end caps can be taken off using a Phillips head screwdriver and rinsed clean. Replace after cleaning.

6. Any loose hair or debris can be pulled from the brush rolls and thrown away. For the most thorough clean before storage, follow directions on pages 17 & 18 for removal and replacement of the brush rolls and belts.

7. To clean attachments that may have been used, remove from hose and rinse in clean, running water. Dry and replace attachment in the tool caddy. Clean the hose by suctioning clean water from a bowl. Before replacing, lift end of hose and stretch out to ensure all water is cleared from hose. Refer to page 13, illustrations 9 & 10.

8. After carpet is dry, vacuum again to remove hair and fuzz.

Need help?

Call:
1-800-237-7691
Mon-Fri: 8am to 10pm ET
Sat: 9am to 8pm ET

Visit:
www.bissell.com/contact-us

3. Filter

To help keep your product running its best, purchase genuine parts and accessories directly from BISSELL.
www.bissell.com